









## To get started, here are some tips that apply to all products:

- Unplug all external power sources, devices, and cables.
- Use only a soft, lint-free cloth dampened with soapy water.
- Keep liquids away from the product, unless otherwise noted for specific products.
- Don't get moisture in any openings.
- Don't use aerosol sprays, bleaches, or abrasives, which may contain flammable substances.
- Never apply cleaners directly on the product; always use a cloth.

## Is it OK to use a disinfectant on my product?

Using a 70 percent isopropyl alcohol wipe or disinfecting wipes, you can gently clean the hard, nonporous surfaces of your instrument like the display or other exterior surfaces. Don't use bleach. Avoid getting moisture in any openings, and don't submerge your product in any cleaning agents.

<sup>\*</sup>Don't clean the screen of your device with a cleaner containing acetone. Use a cleaner intended for use with a screen or display. Never apply cleaner directly on the screen. It may drip inside the display and potentially cause damage.